

HOW TO INSTALL PUTTING GREEN


Materials you'll need

- Skip > For removed turf, soil and vegetation
- Spade
- Vibrating Plate > For compacting the sharp sand
- Turf Cutter > The easiest method of removing your old lawn
- Sharp Stanley Knife
- Large pair of scissors
- Sharp Sand > We suggest 1 Ton per 10m²
- Hammer and Nails
- Weed Membrane > For compacting the sharp sand




PART 1 Ground Preparation for Gardens

- Remove all turf, vegetation and rocks down to bare earth.
- Remove enough soil to be able to add a 35mm layer of sharp sand.

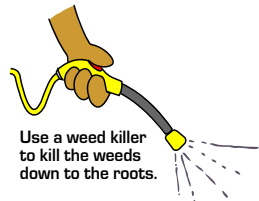

Use a weed killer to kill the weeds down to the roots.

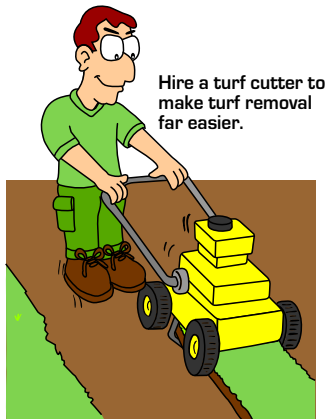

Hire a turf cutter to make turf removal far easier.

PART 2 Installing sub base and weed membrane

- A 35mm sub base of sharp sand is installed



Spread, level and compact the sub base with a hand roller, vibrating plate or plank and heavy hammer.


During dry conditions wet the sub base a day before installation



- Nail or Peg the weed membrane to the sand sub base.

PART 3 Installing your putting green

- Roll out the grass. (If joining grass rolls see below)

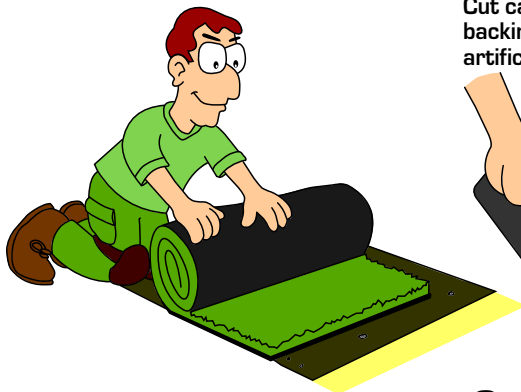


Cut carefully into the backing and trim the artificial grass.




PART 4 Cutting your holes


- Mark back of grass using cup as template with chalk

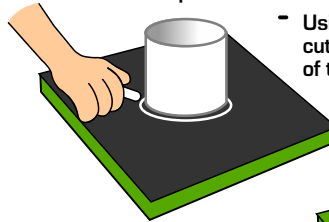

- Using stanley knife, cut on the inside of the chalk line

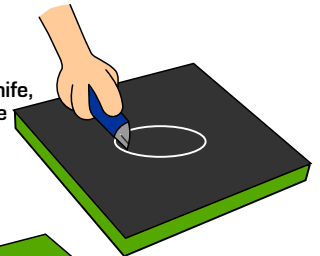

- Remove sand / soil to required level and insert cup once green is in place

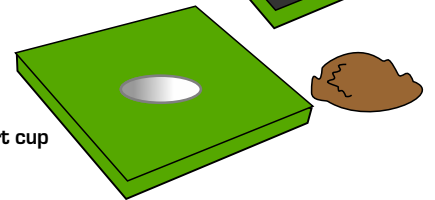

Once the grass is layed brush in 4kg of kiln dry sand per 1m .

Joining the grass

- Seaming tape is used to join rolls together.
- Unroll the seaming tape along the seam line, ensuring equal tape laid centrally along the seam.
- Before applying the adhesive, fix the seaming tape to the sub base with stainless steel nails.

As all rolls have a directional pile, ensure that all rolls are laid out in the same direction

